


Point to Point Reversing With a Siding

One train reversing going to a different siding each time.

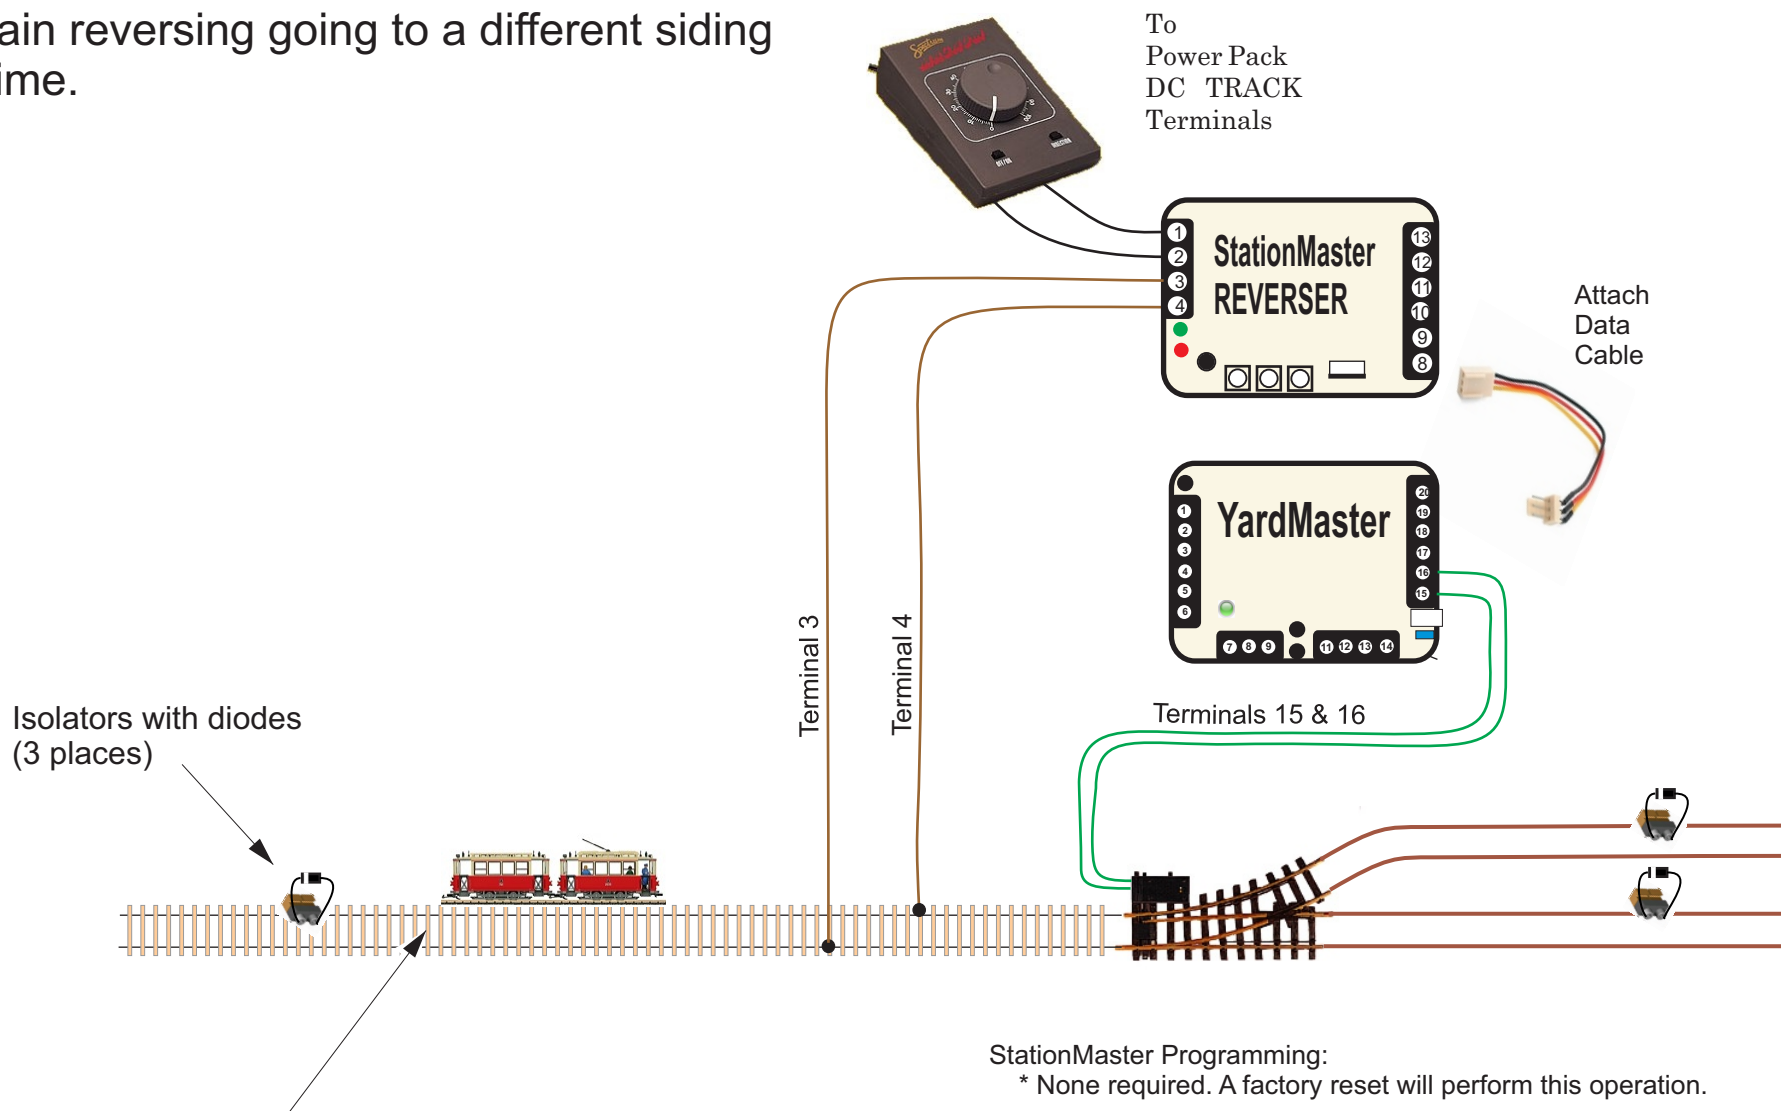

StationMaster Programming:
 * None required. A factory reset will perform this operation.

The YardMaster will only fire when the train is going "forward".
 If the turnout switches on wrong end Swap wires in StationMaster pins 3 and 4.

